

# SLG12864D Series

MPN: RSI12864-02

# **GRAPHIC LCD MODULE USER MANUAL**

Please click the following image to buy the sample













Shenzhen Surenoo Technology Co.,Ltd.

www.surenoo.com Skype: Surenoo365

# **Reference Datasheet & Tools**

**Graphic LCD Selection Guide** 

**STN Module Picture Download Tool** 

**UART Tool** 

Library

www.surenoo.com Page: 01 of 30

# **CONTENTS**

### 1. ORDER INFORMATION

- 1.1 Order Number
- 1.2 Image

### 2. SPECIFICATION

- 2.1 Feature
- 2.2 Mechanical properties

### 3. OUTLINE DRAWING

# 4. ELECTRICAL SPEC & APPLICATION

- 4.1 Pin Configuration
  - 4.1.1 Power and communication interface
  - 4.1.2 Key-scan interface
- 4.2 Limits
  - 4.2.1 DC voltage limit
  - 4.2.2 Ambient temperature limits
- 4.3 Electrical characteristic
  - 4.3.1 DC electrical characteristics
  - 4.3.2 Communication(UART)
- 4.4 Key Scan
- 4.5 Image storage and display
  - 4.5.1 Generate graphics data
  - 4.5.2 Data download
  - 4.5.3 Graphical display
- 4.6 Applications
- 4.7 API functions (c)
  - 4.7.1 API function list
  - 4.7.2 Function description and application

www.surenoo.com Page: 02 of 30

# 5. INSPECTION CRITERIA

- 5.1 Acceptable Quality Level
- 5.2 Definition of Lot
- 5.3 Condition of Cosmetic Inspection
- 5.4 Module Cosmetic Criteria
- 5.5 Screen Cosmetic Criteria (Non-Operating)
- 5.6 Screen Cosmetic Criteria (Operating)

### 6. PRECAUTIONS FOR USING

- 6.1 Handling Precautions
- **6.2 Power Supply Precautions**
- 6.3 Operating Precautions
- 6.4 Mechanical/Environmental Precautions
- 6.5 Storage Precautions
- 6.6 Others

# 7.USING Graphic MODULES

- 7.1 Liquid Crystal Display Modules
- 7.2 Installing Graphci Modules
- 7.3 Precaution for Handling Graphic Modules
- 7.4 Electro-Static Discharge Control
- 7.5 Precaution for Soldering to Surenoo LCM
- 7.6 Precaution for Operation
- 7.7 Limited Warranty
- 7.8 Return Policy

### 8. IMAGE STICKING

- 8.1 What is Image Sticking?
- 8.2 What causes Image Sticking?
- 8.3 How to Avoid Image Sticking?
- 8.4 How to Fix the Image Sticking?
- 8.5 Is Image Sticking Covered by Surenoo RMA Warranty?

www.surenoo.com Page: 03 of 30



### 1. ORDERING INFORMATION

### 1.1 Order Number

Model No.	Display	Size	Outline Size (MM)	Viewing Area (MM)	Area Area (MM)	Interface	Voltage	Controller	MARK	Color Valid	Image
SLG12864D	128*64	3.0"	93*00*70.00	73.00*39.00	66.52*33.24	6P/2.54 RS232 UART	5.0V	-		SURENOO	SHEAMOUT PROD

### 1.2 Image



www.surenoo.com Page: 04 of 30

# 2. SPECIFICATION

### 2.1. Feature

•128\*64 STN Blue/STN YG/STN Grey

• Viewing angle: 6: 00

•Built-in Simplified Chinese, Traditional Chinese, Korean, Japanese, ASCII font

Model No.: SLG12864D

•Font size:

Full-width:16\*16 Half-width:8\*16/5\*7

•Built-in FLASH memory, can be used for image storage

•Support for key scan

•Backlight: White LED (STN Blue / STN Gray), Yellow LED (STN YG)

●Operating Voltage: 5.0±0.1V

•Communication: UART(RS232/CMOS)


### 2.2. Mechanical properties (Summary of Mechanical Properties)

Parameter	Specification	Unit
Overall dimensions	93.0(L)*70.0(W)*13.5(H)	mm
Viewing area (VA)	72.0*40.0	mm
Active area (AA)	66.52*33.24	mm
Resolution	128*64dots	mm
Pixel size	0.48*0.48	mm
Pixel spacing	0.04	mm
Weight	TBD	Grams

www.surenoo.com Page: 05 of 30

# 3. OUTLINE DRAWING



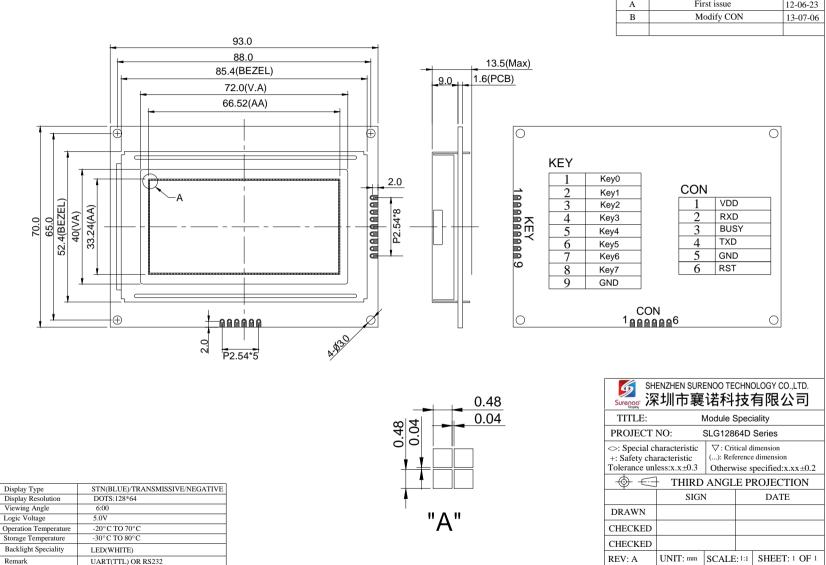



# 4. ELECTRICAL SPEC & APPLICATION

# 4.1. Pin Configuration

### 4.1.1 Power and communication interface

No.	Symbol	I/O	Functional description
1	VDD	P	Power (+5.0V)
2	RXD	I	UART receives signal, connecting to the master's TXD
3	BUSY	O	1:Busy, 0:Idle Generally can be suspended treatment
4	TXD	O	UART transmit signal, connecting to the master's RXD
5	GND	P	Power ground
6	RST	I	Reset signal, active-low

# 4.1.2 Key-scan interface

No.	Symbol	Functional description
1	Key0	
2	Key1	
3	Key2	
4	Key3	Key scan signal, using a key connection between the signal
5	Key4	and ground
6	Key5	
7	Key6	
8	Key7	
9	GND	Power ground

# **4.2.** Limits

# **4.2.1 DC voltage limit** (Ta=25 $^{\circ}$ C)

Parameter	Symbol	Min	Max	Unit
Operating Voltage	VDD	-0.3	5.5	V
Input voltage	VIN	-0.3	VDD+0.3	V

Note: Voltage conditions outside the limits may cause product damage.

The voltages are all relative to GND = 0V.

## 4.2.2 Ambient temperature limits

Parameter	min	max	Unit
Operating temperature	-20	70	${\mathbb C}$
storage temperature	-30	80	${\mathbb C}$

NOTE: Exceeding the limits of the ambient temperature may cause the product to malfunction or damage.

www.surenoo.com Page: 07 of 30

### 4.3. Electrical characteristic

# 4.3.1 DC electrical characteristics (Ta = 25 °C, $VDD = 5.0V \pm 0.1V$ , GND=0V)

Parameter	Symbol	Min	Type	Min	Unit
Operating Voltag	VDD	4.9	5.0	5.1	V
Innut (TTI )	VIH	0.8*VDD	-	VDD	V
Input (TTL)	VIL	GND	-	0.4*VDD	V
Ontont (TTL)	VOH	VDD-0.4	-	VDD	V
Output(TTL)	VOL	GND	-	GND+0.4	V
RS232	RS232 signal	standard			
The backlight is off	IDD1	-	25	-	mA
The backlight is on	IDD2	-	-	115	mA


### **4.3.2** Communication(UART)

Band rate: 9600b/s (Default)

Data bits: 8bit
Parity bit: None
Stop bit: 1bit

# 4.4. Key Scan

Support 8keys scanning function can help system developers to implement keyboard control solution

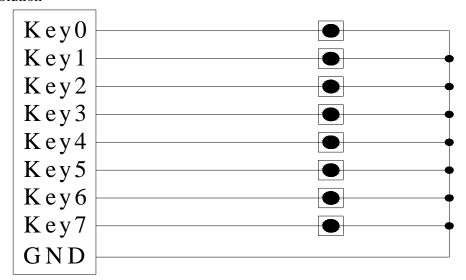

4-3-1 Keyboard reference design schematics

Key No.	Key0	Key1	Key2	Key3	Key4	Key5	Key6	Key7
Key code	00H	01H	02H	03H	04H	05H	06H	07H

4-3-2 Key code table

www.surenoo.com Page: 08 of 30

# Surenoo

### 4.5. Image storage and display


### 4.5.1 Generate graphics data

### step 1:

Edit the graphics: Edit the graphic into a monochrome bitmap (BMP), The resolution (pixels) must be the same as the LCD resolution (Such as 128\*64), You can use the built-in image editor tool in Windows operating system.

### Step 2:

BIN data generation: Vertical mode, byte reverse order, from left to right, from top to bottom (see below)

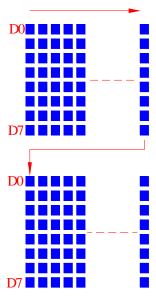

In accordance with the above format requirements to graphics into BIN file.

### Step3

BIN data merge: When multiple pictures are displayed, you will need to merge multiple BIN files into one file with this step. In the BIN Data folder, create a new BAT file and create a copy DOS command(For example:copy / b 1.bin + 2.bin + 3.bin + 4.bin + 5.bin data.bin); Double-click to run the BAT file to generate the data.bin file, This data.bin file is the data to be downloaded to the LCD module.




www.surenoo.com Page: 09 of 30




### 4.5.2 Data download

### Step 1:

Refer to the following figure to connect the LCD module to the PC COM port.

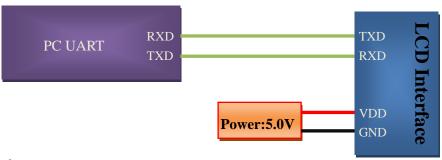

**Step 2:** Run the download tool.

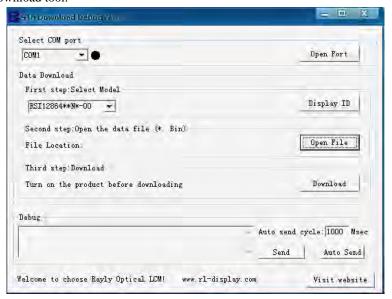

- a. COM Select the COM port and open it.
- b. Select the product model. Click Is displayed on the LCD "P/S" is the model.
- c. LCD Turn on the power; Click Display ID, If the LCD display shows the hardware connection is successful, or check the hardware connection is wrong.
- d.Click \_\_\_\_\_\_ Load the BIN file(The data.bin generated in the previous step)
- e.Click \_\_\_\_\_ Start downloading the data until the prompt is complete.

### 4.5.3 Graphical display

Function 1.

### void display\_bmp(U16 n)

The stored graphic data is displayed

### Parameter:


n: Graphics storage number. The first is 0, the second is 2 ... and so on. The order is determined by the COPY command (Reference Generate graphics data Step3)

www.surenoo.com Page: 10 of 30



```
Example:
```

```
void main()
{
    ...
    display_bmp(0X0001);  // Display the second image in the memory, refer to the //
    //following figure
    while(1);
}
```

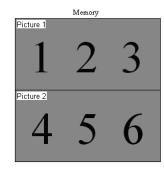



Function 2.

### void display\_bmp\_block(U16 n,U8 px,U8 py,U8 x,U8 y,U8 w,U8 h)

The block copy is displayed

### Parameter:

n: Graphics storage number. The first is 0, the second is 2 ... and so on. The order is determined by the COPY command (Reference Generate graphics data Step3)

px,py: The coordinates of the upper left corner of the block on the image

px:0~127 (Units are dots) ,py:0~7 (The units are bytes)


x,y: The upper left corner of the block coordinates on the LCD.


x:0~127 (Units are dots) ,y:0~7 (The units are bytes)

w: Block width , Ranges: 1~128 (The units are bytes), px+w≤128, x+w≤128,

h: Block height, Ranges:  $1 \sim 8$ .  $py+h \leq 8$ ,  $y+h \leq 8$ 

```
Example: void main()  \{ \\ ... \\ display\_bmp(0X01,px,py,x,y,w,h); //Display "5" at the LCD designation position while(1); \}
```

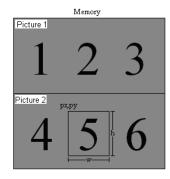

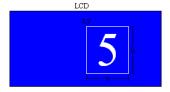


www.surenoo.com Page: 11 of 30




# 4.6. Applications

• UART(TTL) Interface products, directly with the processor UART (TTL: 5.0V)

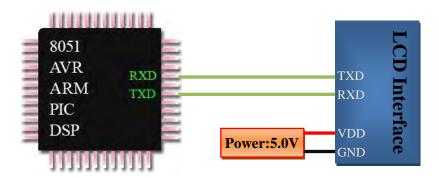

UART (RS232) interface products can be directly with the PC, PLC's RS232 connection

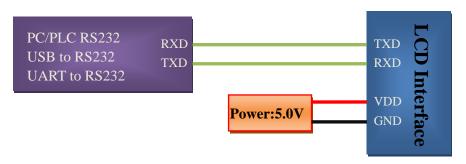

www.surenoo.com Page: 12 of 30

# 4.7. API functions (c)

### **4.7.1 API** function list

Type	Function	Description		
	void reset()	Reset		
	void clear_display()	Clear display		
	void display_on()	Display on		
<b>G</b> .	void display_off()	Display off		
System	void brightness(U8 n)	Backlight brightness adjustment		
	void baud_9600()	Set the baud rate to 9600, power-on default baud rate		
	void baud_19200()	Set the baud rate to 19200		
	void baud_38400()	Set the baud rate to 38400		
	void cusor_xy(U8 x,U8 y)	Character display start position, x:0~127,y:0~7,		
	void inversely_on()	Inverse mode on		
	void inversely_off()	Inverse mode off		
	void print_string(U8 *ptr)	Display8*16/16*16 string at current position		
Text	void print_string_xy(U8 x,U8 y,U8 *ptr)	Display 8*16/16*16 string at the specified position		
	void print_string_5_7(U8 *ptr)	Display 5*7ASCII string at current position		
	print_string_xy_5_7(U8 x,U8 y,U8 *ptr)	Display 5*7 ASCII string at the specified position		
	void agist 1/20(1/22 a)	Long integer variable to display at current position t,font		
	void print_U32(U32 n)	size8*16		
	world print 1122 yru/119 v 119 v 1122 p)	Long integer variable to display at he specified		
	void print_U32_xy(U8 x,U8 y,U32 n)	position,font size 8*16		
	void print_U32_5_7(U32 n);	Long integer variable to display at current position t,font		
	void print_032_3_/(032 ii),	size 5*7		
	void print_U32_xy_5_7(U8 x,U8 y,U32 n);	Long integer variable to display at he specified		
	Void print_032_xy_3_7(00 x,00 y,032 ii),	position,font size 5*7		
	void inversely_area(U8 x1,U8 y1,U8 x2,U8 y2)	Designated area inversely		
Graphic	void display_bmp(U16 n)	The stored graphic data is displayed		
	void display_bmp_block(U16 n,U8 px,U8 py,U8 xU8 y,U8 w,U8 h)	The block copy is displayed		
	void keyscan_enable()	Turn on key scan		
	void keyscan_disable()	Turn off key scan		
Key-scan	void kescan_single()	Set to one-shot mode		
Key-scan	void kescan_ continuous()	Set to continuous trigger mode		
	void kescan_ continuous_cycle(U8 n)	Set the continuous trigger frequency, the default $n = 30$ .		
	Key code output command: 0XAA 0X55 n	n: 0~7(key code)		

www.surenoo.com Page: 13 of 30



### 4.7.2 Function description and application

### **4.7.2.1** void reset()

Reset, Under normal circumstances do not.

### 4.7.2.2 void clear display()

Clear display, Return to the starting position 0,0

### 4.7.2.3 void display\_on()

Display on, the power-on default

### 4.7.2.4 void display\_off()

Display off, Turn off LCD and backlight

### 4.7.2.5 void brightness(U8 n)

Backlight brightness adjustment

Parameter

n:0~0xff, Default 0XFF

### 4.7.2.6 void baud 9600()

Set the baud rate to 9600, the default baud rate on power-up

### 4.7.2.7 void baud\_19200()

Set the baud rate to 19200

### 4.7.2.8 void baud\_38400()

Set the baud rate to 38400

### 4.7.2.9 void cusor\_xy(U8 x,U8 y)

Character display start position

Parameter

 $x:0\sim 127$ 


y:0~7

### 4.7.2.10 void inversely\_on()

Set the character display mode to the reverse mode. Only valid for new display after executing this function.

### 4.7.2.11 void inversely\_off()

Set the character display mode to normal mode. Only valid for new display after executing this function. Power-up default state

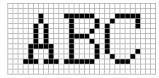

normal mode



reverse mode

www.surenoo.com Page: 14 of 30

Surenco

### 4.7.2.12 void print\_string(U8 \*ptr)

Display Full-width(16\*16) or half-width(8\*16) string at current position, Automatically identify full-width or half-width.

Parameter

\*ptr: strings

Example

void print\_string("中文LCD"); //L

//Display "中文LCD"

Model No.: SLG12864D

### 4.7.2.13 void print\_string\_xy(U8 x,U8 y,U8 \*ptr)

Display Full-width (16\*16) or half-width (8\*16) string at the specified position, Automatically identify full-width or half-width.

Parameter

\*ptr: strings

*x:0~127* 

y:0~7

Example

void print\_string(0,0"串口液晶模块ABCD");

# 串口液晶模块ABCD

LCD display

### 4.7.2.14 void print\_string\_5\_7(U8 \*ptr)

Display half-width(5\*7) string at current position

Parameter

\*ptr: strings

Example

void print\_string\_5\_7("lcd256");

//Display "lcd256"

### 4.7.2.15 void print\_string\_xy\_5\_7(U8 x,U8 y,U8 \*ptr)

Display half-width (5\*7) string at the specified position.

Parameter

\*ptr: strings

x:0~127

y:0~7

### 4.7.2.16 void print\_U32(U32 n)

Long integer variable to display at current position t,font size 8\*16

Parameter

n: 0~4294967295(Decimal)

Example

void print\_U32(898); //display 898

www.surenoo.com Page: 15 of 30

### 4.7.2.17 void print\_U32\_xy(U8 x,U8 y,U32 n)

```
Long integer variable to display at the specified positiont, font size 8*16 Parameter x:0\sim127 y:0\sim7 n:0\sim4294967295(Decimal)
```



### LCD display

### 4.7.2.18 void print\_U32\_5\_7(U32 n)

Long integer variable to display at current position t,font size 5\*7

Parameter

}

n: 0~4294967295(Decimal)

Example

void print\_U32\_5\_7(898); //display 898

### 4.7.2.19 void print\_U32\_xy\_5\_7(U8 x,U8 y,U32 n)

Long integer variable to display at the specified positiont, font size 5\*7

Parameter

*x:0~127* 

y:0~7

n: 0~4294967295(Decimal)

### 4.7.2.20 void inversely\_area(U8 x1,U8 y1,U8 x2,U8 y2)

Designated area inversely

Parameter

*x1:0~127* 

y1:0~7

x2:0~127

y2:0~7

www.surenoo.com Page: 16 of 30

# Surenoo®

### 4.7.2.21 void display\_bmp(U16 n)

The block copy is displayed

### Parameter:

n: Graphics storage number. The first is 0, the second is 2 ... and so on. The order is determined by the COPY command (Reference Generate graphics data Step3)

Model No.: SLG12864D

px,py: The coordinates of the upper left corner of the block on the image px:0~127 (Units are dots) ,py:0~7 (The units are bytes)

x,y: The upper left corner of the block coordinates on the LCD.  $x:0\sim127$  (Units are dots),  $y:0\sim7$  (The units are bytes)

w: Block width , Ranges: 1~128 (The units are bytes), px+w≤128, x+w≤128,

h: Block height, Ranges: 1~8° py+h≤8, y+h≤8

### 4.7.2.22 void keyscan\_enable()

Turn on key scan

### 4.7.2.23 void lyscan\_disable()

Turn off key scan

### 4.7.2.24 void kescansingle()

Set to one-shot mode

### 4.7.2.25 void kescan\_continuous()

Set to continuous trigger mode

### 4.7.2.26 void kescancontinuous\_cycle(U8 n)

Set the continuous trigger frequency, the default n = 30.

### 4.7.2.27 Key code output command: 0XAA 0X55 n

When the user presses the key, the module sends the key code to the host computer through the TXD, for the master to judge the function which the user chooses.

Parameter

n:0~7, Refer to page 7(6-2 Keycode table)

www.surenoo.com Page: 17 of 30

### 5. INSPECTION CRITERIA

### 5.1 Acceptable Quality Level

Each lot should satisfy the quality level defined as follows

Partition	AQL	Definition
A. Major	0.4%	Functional defective as product
B. Minor	1.5%	Satisfy all functions as product but not satisfy cosmetic standard

### 5.2 Definition of Lot

One lot means the delivery quantity to customer at one time.

- 5.3 Condition of Cosmetic Inspection
- INSPECTION AND TEST
- -FUNCTION TEST
- -APPEARANCE INSPECTION
- -PACKING SPECIFICTION
- INSPECTION CONDITION
- Put under the lamp (20W) at a distance 100mm from
- Tilt upright 45 degree by the front (back) to inspect Panel appearance.
- AQL INSPECTION LEVEL
- SAMPLING METHOD: MIL-STD-105D
- SAMPLING PLAN: SINGLE
- MAJOR DEFECT: 0.4% (MAJOR)MINOR DEFECT: 1.5% (MINOR)GENERAL LEVEL: II/NORMAL

www.surenoo.com Page: 18 of 30



# Surenoo®

### 5.4 Module Cosmetic Criteria

No.	Item	Judgment Criterion	Partition
1	Difference in Spec.	None allowed	Major
2	Pattern Peeling	No substrate pattern peeling and floating	Major
3	Soldering Defects	No soldering missing	Major
		No soldering bridge	Major
		No cold soldering	Minor
4	Resist Flaw on Substrate	Invisible copper foil( \$ 0.5mm or more)on substrate pattern	Minor
5	Accretion of Metallic	No soldering dust	Minor
	Foreign Matter	No accretion of metallic foreign matters(Not exceed ¢ 0.2mm)	
6	Stain	No stain to spoil cosmetic badly	Minor
7	Plate Discoloring	No plate fading, rusting and discoloring	Minor
	Solder Amount 1.Lead Parts	a. Soldering side of PCB Solder to form a' Filet' all around t Solder should not hide the lead form  b.Components side (In case of 'Through Hole PCB') Solder to reach the Components side of PCB	Minor
8	2.Flat Packages  3.Chips	Either 'toe' (A) or 'heal' (B) of the lead to be covered by Filet'  Lead form to be assume over solder.  (3/2) H≥h≥(1/2)H	Minor

www.surenoo.com Page: 19 of 30

5	urenoo
	Display

9	Backlight Defects	1.Light fails or flickers.(Major)	
		2. Color and luminance do not correspond to specifications.	See
		(Major)	list
		3.Exceeds standards for display's blemishes, foreign matter,	←
		dark lines or scratches.(Minor)	
10	PCB Defects	Oxidation or contamination on connectors.*	
		2. Wrong parts, missing parts, or parts not in specification.*	
		3.Jumpers set incorrectly.(Minor)	See
		4.Solder(if any)on bezel, LED pad, zebra pad, or screw hole	list
		pad is not smooth.(Minor)	←
		*Minor if display functions correctly. Major if the display fails.	
11	Soldering Defects	1. Unmelted solder paste.	Minor
		2. Cold solder joints, missing solder connections, or oxidation.*	
		3. Solder bridges causing short circuits.*	
		4. Residue or solder balls.	
		5. Solder flux is black or brown.	
		*Minor if display functions correctly. Major if the display fails.	

www.surenoo.com Page: 20 of 30

# 5.5 Screen Cosmetic Criteria (Non-Operating)

No.	Defect	Judgment Criterion		Partition
1	Spots	In accordance with Screen Cosmetic Criteria (Operating) No.1.		Minor
2	Lines	In accordance with Screen Cosmetic	Criteria (Operation) No.2.	Minor
3	Bubbles in Polarizer	Subbles in Polarizer		Minor
		Size: d mm	Acceptable Qty in active area	
		d≦0.3	Disregard	
		0.3 < d≦1.0	3	
		1.0 < d≦1.5	1	
		1.5 <d< td=""><td>0</td><td></td></d<>	0	
4	Scratch	cratch In accordance with spots and lines operating cosmetic criteria, When the light		Minor
		reflects on the panel surface, the scra		
5	Allowable density	Above defects should be separated more than 30mm each other.		Minor
6	Coloration	Not to be noticeable coloration in the	Minor	
		Back-lit type should be judged with b		
7	Contamination	Not to be noticeable.		Minor

www.surenoo.com Page: 21 of 30

# Surenco

### 5.6 Screen Cosmetic Criteria (Operating)

No.	Defect Judgment Criterion		nt Criterion	Partition	
1	Spots	A) Clear		Minor	
		Size:d mm	Acceptable Qty in active area		
		d≦0.1	Disregard		
		0.1 <d≦0.2< td=""><td>6</td><td></td></d≦0.2<>	6		
		0.2 <d≦0.3< td=""><td>2</td><td></td></d≦0.3<>	2		
		0.3 <d< td=""><td>0</td><td></td></d<>	0		
		Note: Including pin holes and defective	dots which must be within one pixel		
		Size.	·		
		Unclear			
		Size:d mm	Acceptable Qty in active area		
		d≦0.2	Disregard		
		0.2 <d≦0.5< td=""><td>6</td><td></td></d≦0.5<>	6		
		0.5 <d≦0.7< td=""><td>2</td><td></td></d≦0.7<>	2		
		0.7 <d< td=""><td>0</td><td></td></d<>	0		
2	Lines	A) Clear		Minor	
		L 5.0	(0) —— See No.1		

Clear' = The shade and size are not changed by Vo.

Unclear' = The shade and size are changed by Vo.

www.surenoo.com Page: 22 of 30



No.	Defect	Judgment Criterion	Partition
3	Rubbing line	Not to be noticeable.	Minor
4	Allowable density	Above defects should be separated more than 10mm each other.	Minor
5	Rainbow	Not to be noticeable.	Minor
6	Dot size	To be 95%~105%of the dot size (Typ.) in drawing.  Partial defects of each dot (ex.pin-hole) should be treated as spot.  (see Screen Cosmetic Criteria (Operating) No.1)	Minor
7	Brightness (only back-lit Module)	Brightness Uniformity must be BMAX/BMIN≦2  - BMAX : Max.value by measure in 5 points  - BMIN : Min.value by measure in 5 points  Divide active area into 4 vertically and horizontally.  Measure 5 points shown in the following figure.	Minor
8	Contrast Uniformity	Contrast Uniformity must be BmAX/BMIN≦2  Measure 5 points shown in the following figure.  Dashed lines divide active area into 4 vertically and horizontally.  Measuring points are located at the inter-sections of dashed line.  Note: BMAX – Max.value by measure in 5 points.  BMIN – Min.value by measure in 5 points.  O – Measuring points in ¢ 10mm.	Minor

### Note:

- (1) Size: d=(long length + short length)/2
- (2) The limit samples for each item have priority.
- (3) Complexed defects are defined item by item, but if the number of defects is defined in above table, the total number should not exceed 10.

www.surenoo.com Page: 23 of 30

### 6.3 Operating Precautions

- DO NOT plug or unplug Surenoo module when the system is powered up.
- Minimize the cable length between Surenoo module and host MPU.
- For models with backlights, do not disable the backlight by interrupting the HV line. Unload inverters produce voltage extremes that may arc within a cable or at the display.

Model No.: SLG12864D

Operate Surenoo module within the limits of the modules temperature specifications.

### 6.4 Mechanical/Environmental Precautions

- Improper soldering is the major cause of module difficulty. Use of flux cleaner is not recommended as they may seep under the electrometric connection and cause display failure.
- Mount Surenoo module so that it is free from torque and mechanical stress.
- Surface of the Graphic panel should not be touched or scratched. The display front surface is an easily scratched, plastic polarizer. Avoid contact and clean only when necessary with soft, absorbent cotton dampened with petroleum benzene.
- Always employ anti-static procedure while handling Surenoo module.
- Prevent moisture build-up upon the module and observe the environmental constraints for storage tem
- Do not store in direct sunlight
- If leakage of the liquid crystal material should occur, avoid contact with this material, particularly ingestion. If the body or clothing becomes contaminated by the liquid crystal material, wash thoroughly with water and soap.

### 6.5 Storage Precautions

When storing the Graphic modules, avoid exposure to direct sunlight or to the light of fluorescent lamps. Keep Surenoo modules in bags (avoid high temperature / high humidity and low temperatures below 0 °C.

Whenever possible, Surenoo Graphic modules should be stored in the same conditions in which they were shipped from our company.

### 6.6 Others

Liquid crystals solidify under low temperature (below the storage temperature range) leading to defective orientation or the generation of air bubbles (black or white). Air bubbles may also be generated if the module is subject to a low temperature. If Surenoo Graphic modules have been operating for a long time showing the same display patterns, the display patterns may remain on the screen as ghost images and a slight contrast irregularity may also appear. A normal operating status can be regained by suspending use for some time. It should be noted that this phenomenon does not adversely affect performance reliability.

To minimize the performance degradation of the Graphic modules resulting from destruction caused by static electricity etc., exercise care to avoid holding the following sections when handling the modules.

- -Exposed area of the printed circuit board.
- -Terminal electrode sections.

www.surenoo.com Page: 24 of 30

Surenoo

(4) In case of 'concentration', even the spots or the lines of 'disregarded' size should not be allowed. Following three situations should be treated as 'concentration'.

Model No.: SLG12864D

- -7 or over defects in circle of \$5mm.
- -10 or over defects in circle of \$\psi\$ 10mm
- -20 or over defects in circle of ¢20mm

### 6. PRECAUTIONS FOR USING

### 6.1 Handling Precautions

- This device is susceptible to Electro-Static Discharge (ESD) damage. Observe Anti-Static precautions.
- Surenoo display panel is made of glass. Do not subject it to a mechanical shock by dropping it or impact.
- If Surenoo display panel is damaged and the liquid crystal substance leaks out, be sure not to get any in your mouth. If the substance contacts your skin or clothes, wash it off using soap and water.
- Do not apply excessive force to the Surenoo display surface or the adjoining areas since this may cause the color tone to vary.
- The polarizer covering the Surenoo display surface of the Graphic module is soft and easily scratched. Handle this polarizer carefully.
- If Surenoo display surface becomes contaminated, breathe on the surface and gently wipe it with a soft dry cloth. If it is heavily contaminated, moisten cloth with one of the following Isopropyl or alcohol.
- Solvents other than those above-mentioned may damage the polarizer. Especially, do not use the Water.
- Exercise care to minimize corrosion of the electrode. Corrosion of the electrodes is accelerated by water droplets, moisture condensation or a current flow in a high-humidity environment.
- Install the Surenoo Graphic Module by using the mounting holes. When mounting the Graphic module make sure it is free of twisting, warping and distortion. In particular, do not forcibly pull or bend the cable or the backlight cable.
- Do not attempt to disassemble or process Surenoo Graphic module.
- NC terminal should be open. Do not connect anything.
- If the logic circuit power is off, do not apply the input signals.
- To prevent destruction of the elements by static electricity, be careful to maintain an optimum work environment.
  - -Be sure to ground the body when handling Surenoo Graphic modules.
  - -Tools required for assembling, such as soldering irons, must be properly grounded.
- -To reduce the amount of static electricity generated, do not conduct assembling and other work under dry conditions.
- -The Graphic module is coated with a film to protect the display surface. Exercise care when peeling off this protective film since static electricity may be generated.

### 6.2 Power Supply Precautions

- Identify and, at all times, observe absolute maximum ratings for both logic and LC drivers. Note that there is some variance between models.
- Prevent the application of reverse polarity to VDD and VSS, however briefly.
- Use a clean power source free from transients. Power-up conditions are occasionally jolting and may exceed the maximum ratings of Surenoo modules.
- The VDD power of Surenoo module should also supply the power to all devices that may access the display. Don' t allow the data bus to be driven when the logic supply to the module is turned off.

www.surenoo.com Page: 25 of 30

# 7. USING Graphic MODULES

### 7.1 Liquid Crystal Display Modules

Surenoo Display is composed of glass and polarizer. Pay attention to the following items when handling.

• Please keep the temperature within specified range for use and storage. Polarization degradation, bubble generation or polarizer peel-off may occur with high temperature and high humidity.

Model No.: SLG12864D

- Do not touch, push or rub the exposed polarizers with anything harder than an HB pencil lead (glass, tweezers, etc.).
- N-hexane is recommended for cleaning the adhesives used to attach front/rear polarizers and reflectors made of organic substances which will be damaged by chemicals such as acetone, toluene, ethanol and isopropyl alcohol.
- When Surenoo display surface becomes dusty, wipe gently with absorbent cotton or other soft material like chamois soaked in petroleum benzin. Do not scrub hard to avoid damaging the display surface.
- Wipe off saliva or water drops immediately, contact with water over a long period of time may cause deformation or color fading.
- Avoid contacting oil and fats.
- Condensation on the surface and contact with terminals due to cold will damage, stain or dirty the polarizers. After products are tested at low temperature they must be warmed up in a container before coming is contacting with room temperature air.
- Do not put or attach anything on Surenoo display area to avoid leaving marks on.
- Do not touch the display with bare hands. This will stain the display area and degradate insulation between terminals (some
  cosmetics are determinated to the polarizers).
- As glass is fragile. It tends to become or chipped during handling especially on the edges. Please avoid dropping.

### 7.2 Installing Graphic Modules

- Cover the surface with a transparent protective plate to protect the polarizer and LC cell.
- When assembling the LCM into other equipment, the spacer to the bit between the LCM and the fitting
  plate should have enough height to avoid causing stress to the module surface, refer to the individual specifications for
  measurements. The measurement tolerance should be±0.1mm.

### 7.3 Precaution for Handling Graphic Modules

Since Surenoo LCM has been assembled and adjusted with a high degree of precision; avoid applying excessive shocks to the module or making any alterations or modifications to it.

- Do not alter, modify or change the shape of the tab on the metal frame.
- Do not make extra holes on the printed circuit board, modify its shape or change the positions of components to be attached.
- Do not damage or modify the pattern writing on the printed circuit board.
- Absolutely do not modify the zebra rubber strip (conductive rubber) or heat seal connector.
- Except for soldering the interface, do not make any alterations or modifications with a soldering iron.
- Do not drop, bend or twist Surenoo LCM.

www.surenoo.com Page: 26 of 30

### 7.4 Electro-Static Discharge Control

Since this module uses a CMOS LSI, the same careful attention should be paid to electrostatic discharge as for an ordinary CMOS IC.

Model No.: SLG12864D

- Make certain that you are grounded when handing LCM.
- Before remove LCM from its packing case or incorporating it into a set, be sure the module and your body have the same electric potential.
- When soldering the terminal of LCM, make certain the AC power source for the soldering iron does not leak.
- When using an electric screwdriver to attach LCM, the screwdriver should be of ground potentiality to minimize as much as possible any transmission of electromagnetic waves produced sparks coming from the commutator of the motor.
- As far as possible make the electric potential of your work clothes and that of the work bench the ground potential.
- To reduce the generation of static electricity be careful that the air in the work is not too dried. A relative humidity of 50%-60% is recommended.

### 7.5 Precaution for Soldering to Surenoo LCM

- Observe the following when soldering lead wire, connector cable and etc. to the LCM.
  - -Soldering iron temperature : 280°C±10°C
  - -Soldering time: 3-4 sec.
  - -Solder: eutectic solder.

If soldering flux is used, be sure to remove any remaining flux after finishing to soldering operation. (This does not apply in the case of a non-halogen type of flux.) It is recommended that you protect the Panel surface with a cover during soldering to prevent any damage due to flux spatters.

- When soldering the electroluminescent panel and PC board, the panel and board should not be detached more than three times. This maximum number is determined by the temperature and time conditions mentioned above, though there may be some variance depending on the temperature of the soldering iron.
- When remove the electroluminescent panel from the PC board, be sure the solder has completely melted, the soldered pad
  on the PCs board could be damaged.

### 7.6 Precaution for Operation

- Driving the Surenoo Graphic in the voltage above the limit shortens its life.
- Response time is greatly delayed at temperature below the operating temperature range. However, this does not mean the Panel will be out of the order. It will recover when it returns to the specified temperature range.
- If Surenoo display area is pushed hard during operation, the display will become abnormal. However, it will return to normal if it is turned off and then back on.
- Condensation on terminals can cause an electrochemical reaction disrupting the terminal circuit. Therefore, it must be used under the relative condition of 40°C, 50% RH.
- When turning the power on, input each signal after the positive/negative voltage becomes stable.

www.surenoo.com Page: 27 of 30

### 7.7 Limited Warranty

Unless agreed between Surenoo and customer, Surenoo will replace or repair any of its Graphic modules which are found to be functionally defective when inspected in accordance with Surenoo Graphic acceptance standards (copies available upon request) for a period of one year from date of shipments. Cosmetic/visual defects must be returned to Surenoo within 90 days of shipment. Confirmation of such date shall be based on freight documents. The warranty liability of Surenoo limited to repair and/or replacement on the terms set forth above. Surenoo will not be responsible for any subsequent or consequential events.

Model No.: SLG12864D

### 7.8 Return Policy

No warranty can be granted if the precautions stated above have been disregarded. The typical examples of violations are:

- -Broken Graphic glass.
- -PCB eyelet damaged or modified.
- -PCB conductors damaged.
- -Circuit modified in any way, including addition of components.
- -PCB tampered with by grinding, engraving or painting varnish.
- -Soldering to or modifying the bezel in any manner.

Module repairs will be invoiced to the customer upon mutual agreement. Modules must be returned with sufficient description of the failures or defects. Any connectors or cable installed by the customer must be removed completely without damaging the PCB eyelet's, conductors and terminals.

www.surenoo.com Page: 28 of 30

### 8. IMAGE STICKING

### 8.1 What is Image Sticking?

If you remain a fixed image on Graphic Display for a long period of time, you may experience a phenomenon called Image Sticking. Image Sticking - sometimes also called "image retention" or "ghosting" - is a phenomenon where a faint outline of a previously displayed image remains visible on the screen when the image is changed. It can occur at variable levels of intensity depending on the specific image makeup, as well as the amount of time the core image elements are allowed to remain unchanged on the screen. In POS applications, for example, a button menu which remains fixed, or in which the "frame" elements (core image) remain fixed and the buttons may change, may be susceptible to image sticking. It is important to note that if the screen is used exclusively for this application, the user may never notice this phenomenon since the screen never displays other content. It is only when an image other than the "retained" image is shown on the screen that this issue becomes evident. Image sticking is different that the "burn-in" effect commonly associated with phosphor based devices.

Model No.: SLG12864D

### 8.2 What causes Image Sticking?

Image sticking is an intrinsic behavior of Graphic displays due to the susceptibility to polarization of the interior materials (liquid crystals) when used under static, charged conditions (continuously displaying the same image). The individual liquid crystals in an Graphic panel have unique electrical properties. Displaying a fixed pattern - such as the POS menu described above – over prolonged periods can cause a parasitic charge build-up (polarization) within the liquid crystals which affects the crystals' optical properties and ultimately prevents the liquid crystal from returning to its normal, relaxed state when the pattern is finally changed. This effect takes place at a cellular level within the Panel, and the effect can cause charged crystal alignment at the bottom or top of a crystal cell in the "z" axis, or even crystal migration to the edges of a cell, again based on their polarity. These conditions can cause image sticking over an entire area, or at boundaries of distinct color change respectively. In either case, when the liquid crystals in the pixels and sub-pixels utilized to display the static image are polarized such that they can not return fully to their "relaxed" state upon deactivation, the result is a faint, visible, retained image on the panel upon presentation of a new, different image. The actual rate of image retention depends on variation factors such as the specific image, how long it is displayed unchanged, the temperature within the panel and even the specific panel brand due to manufacturing differences amongst panel manufacturers.

www.surenoo.com Page: 29 of 30

### 8.3 How to Avoid Image Sticking?

- Try not to operate the Graphic with a "fixed" image on the screen for more than 2 hours.
- If you are operating the monitor in an elevated temperature environment and with a displayed image which is contrary to the recommendations in "For Software Developers" below, image stick can occur in as little as 30 minutes. Adjust your screen saver settings accordingly.

Model No.: SLG12864D

- Power down the unit during prolonged periods of inactivity such as the hours a store is closed or a shift during which the piece of equipment isn't used.
- Use a screensaver with a black or medium gray background that is automatically set to come on if the device is inactive for more than 5-10 minutes.
- Avoid placing the monitor in poorly ventilated areas or in areas that will create excess heat around the monitor for software developers.
- In defining the icons, buttons, or windows in the screen, try to utilize block patterns instead of distinct lines as borders for dividing the display into distinct areas.
- If it is necessary to display a static image, try to use colors that are symmetric to the middle grey level at the boundary of two different colors, and slightly shift the borders line once in a while.
- Try to utilize medium gray hues for those areas that will have prolonged display times or remain static as other menu elements change.

### 8.4 How to Fix the Image Sticking?

Unlike the usually irreversible "burn-in" effects commonly associated with direct view phosphor display devices such as CRTs, an image retained on an Graphic display can be reversed – often to a point of total invisibility. However, the severity of the underlying causes (as described above) of the image retained on a specific display, as well as the variation factors (see "For Software Developers" above) under which the retained image was created, will dictate the final level of retention reversal. One way to erase a retained image on a panel is to run the screen (monitor "on") in an "all black" pattern for 4-6 hours. It is also helpful to do this in an elevated temperature environment of approximately 35° to 50°C. Again, utilizing a dynamic screen saver with an all black background during prolonged idle display periods is a good way to avoid image retention issues.

### 8.5 Is Image Sticking Covered by Surenoo RMA Warranty?

Image sticking is a phenomenon inherent to Graphic Display technology itself, and as such, the occurrence of this "ghosting" effect is considered normal operation by the manufacturers of the Graphic display modules which are integrated into today's monitor solutions. Surenoo does not warrant any display against the occurrence of image sticking. We strongly advise that you follow the operating recommendations listed above to avoid the occurrence of this phenomenon.

### That's the end of the datasheet.

www.surenoo.com Page: 30 of 30